

Yealink Phone Provisioning Guide

Yealink T2XP

1. Power up the phone
2. Press "ok" button on phone to obtain IP Address and MAC Address
3. Open a browser on the same network as the phone.
4. Open web browser and type in IP of phone (<http://x.x.x.x>)
5. Username: admin Password: admin
6. Select Upgrade Tab => Advanced
7. Provisioning Server: Provisioning Host from PBX Info screen in portal
8. Provisioning Server string: <ftp://sipregistration.com>
9. Username: Provisioning User from PBX Info screen in portal
10. Password: Provisioning Password from PBX Info screen in portal
11. Select Auto Provision

At this point the phone will go out and pull down its configuration file. Once phone reboots you will be able to make and receive calls.

Yealink T3XG

1. Power up the phone
2. Press "ok" button on phone to obtain IP Address and MAC Address
3. Open a browser on the same network as the phone.
4. Open web browser and type in IP of phone (<http://x.x.x.x>)
5. Username: admin Password: admin
6. Select Phone Tab => Auto Provision
7. Provisioning Server: Provisioning Host from PBX Info screen in portal
8. Provisioning Server string: <ftp://sipregistration.com>
9. Username: Provisioning User from PBX Info screen in portal
10. Password: Provisioning Password from PBX Info screen in portal
11. Select Auto Provision Now

At this point the phone will go out and pull down its configuration file. Once phone reboots you will be able to make and receive calls.