



	_ '
Menu and Soft Key Information	


DATE AND TIME	Displays the current date and time.
NETWORK STATUS	Displays the status of the phone and network.
STATUS BAR	Shows the status of the phone.
LINE STATUS	Displays name of the account in use.
SOFTKEYS	Context sensitive depend on phone status
 FORWARD ALL 	Forwards the phone line to another phone
 MISSED CALL 	Shows up if unanswered calls to this phone
 NEXTSCR 	Toggles: idle screen, weather, & IP Address.
• REDIAL	Redials the last number
END CALL	Hangs up phone



Calls Forwarded Icon: INDICATES calls are forwarded

- Voice Mail / Message Waiting Indicator: ON when there is a new Voice mail message
- Network Status: Network is down
- Missed Call Icon: Indicates missed calls

Save Call Record: Indicates phone system writing the call records into the flash. It might take 10 to 20 seconds to finish the process.

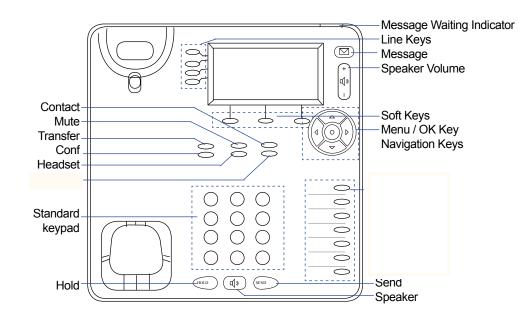

VE call on hold
l out the number or redial when the phone is idle
ACTIVE call to another number
F button to connect Calling/Called party into
ive call
DSET key to answer/hang up phone calls while et. It also allows user to toggle between headset
ad Configuration "MENU" mode when phone node,Use as ENTER key when in Keypad on
rieve voice mails or other messages
able hands-free speaker
keys "UP" "DOWN" "LEFT" "RIGHT". Press to menu options. When the phone is idle press "UP" sed call; press "DOWN" to view phonebook

0-9, *****, **#** Standard phone keypad; press # key to send call; press * key for IVR functions



HopDial - www.hopdial.com